

INSTALLATION AND OPERATION MANUAL



DIRECT VENT GAS WATER HEATER MODELS
SW4D Direct Spark Ignition • SW6D Direct Spark Ignition
SW4DE Direct Spark Ignition and Electric Element
SW6DE Direct Spark Ignition and Electric Element
SW6DM Direct Spark Ignition and Motor Aid
SW6DEM Direct Spark Ignition, Electric Element, and Motor Aid



FOR INSTALLATION IN RECREATIONAL VEHICLES AND MOBILE HOUSING

FOR YOUR SAFETY

WHAT TO DO IF YOU SMELL GAS

- DO NOT TRY TO LIGHT ANY APPLIANCE.
- DO NOT TOUCH ANY ELECTRIC SWITCH: DO NOT USE ANY PHONE IN YOUR VEHICLE.
- IMMEDIATELY CALL YOUR GAS SUPPLIER FROM A NEIGHBOR'S PHONE. FOLLOW THE GAS SUPPLIER'S INSTRUCTIONS.
- IF YOU CANNOT REACH YOUR GAS SUPPLIER, CALL THE FIRE DEPARTMENT.

FREEZE WARNING

DRAIN HEATER IF SUBJECT TO FREEZING TEMPERATURES.

WARNING: IMPROPER INSTALLATION, ADJUSTMENT, ALTERATION, SERVICE OR MAINTENANCE CAN CAUSE INJURY OR PROPERTY DAMAGE. REFER TO THIS MANUAL. FOR ASSISTANCE OR ADDITIONAL INFORMATION, CONSULT A QUALIFIED INSTALLER, SERVICE AGENCY OR THE GAS SUPPLIER.

FOR YOUR SAFETY

DO NOT STORE OR USE GASOLINE OR OTHER COMBUSTIBLE MATERIALS OR LIQUIDS NEAR OR ADJACENT TO THIS HEATER OR ANY OTHER APPLIANCE. THIS APPLIANCE SHALL NOT BE INSTALLED IN ANY LOCATION WHERE FLAMMABLE LIQUIDS OR VAPORS ARE LIKELY TO BE PRESENT.

AN ODORANT IS ADDED TO THE GAS USED BY THIS WATER HEATER.

INSTALLER: AFFIX THESE INSTRUCTIONS TO OR ADJACENT TO WATER HEATER.
OWNER: RETAIN THESE INSTRUCTIONS AND WARRANTY FOR FUTURE REFERENCE.

ALL TECHNICAL AND WARRANTY QUESTIONS SHOULD BE DIRECTED TO THE COMPANY LISTED ON THE WARRANTY OR RATING PLATE WHICH CAME WITH YOUR WATER HEATER.



AIRXCEL, INC. - SUBURBAN DIVISION
676 Broadway Street
Dayton, Tennessee 37321
423-775-2131
www.Airxcel.com

SAFETY WARNINGS

WARNING!

result in damage to the tank and/or controls. This type of damage is not covered by the

WARNING!

Should overheating occur, or the gas supply fail to shut off, shut off the manual gas valve to the appliance before shutting off the electrical supply.

When considering add-on rooms, porch or patio, attention must be given to the venting of being vented into the rooms or occupied areas.

Never operate the heater if you smell gas. Do not assume that the smell of gas in your RV is normal. Any time you detect the odor of gas, it is to be considered life threatening and persons from the vehicle. Shut off gas supply at LP gas bottle. (See Safety notice on front cover of this manual.)

NOTE:

faucets, close both faucets.

WARNING!

vapors are likely to be present.

INSTALLATION REQUIREMENTS

WARNING!

instructions provided in this manual. No agent, representative or employee of Suburban or contained in this manual.

NOTE: Do not install the water heater with the door facing toward the forward end of the coach. See Figures 19, 20 and 21.

CAUTION:

CAUTION: Due to the differences in vinyl siding, this appliance should not be installed on from the area around the appliance vent.

CAUTION:

insure that the appliance cannot be operated by setting the thermostat to the positive "OFF" position and shutting off all electrical and gas supply to the appliance.

CAUTION:

appliance is not to be installed under any overhang. It must be free and clear of any type overhang.

American National Standard for Recreational Vehicles NFPA 1192. In Canada the

A. For installation in Recreational Vehicle

1. Gas - CSA standard CSA Z240.4.2-08 Installation Requirements for Propane Appliances and Equipment in Recreational Vehicles.
2. Electrical - CSA standard C22.2 No. 148/Z240.6.2-08/C22.2 No. 148-08 Electrical Requirements for Recreational Vehicles.
3. Plumbing - CSA standard CSA Z240.3.2 Plumbing Requirements for Recreational Vehicles.

B. For installation in Mobile Housing

1. Gas - CSA standard CSA Z240.4.1 Installation Requirements for Gas Burning Appliances and Equipment in Mobile Homes.
2. Electrical - CSA standard CSA C22.1 Canadian Electrical Code Part 1.
3. Plumbing - CSA standard CSA Z240.3.1 Plumbing Requirements for Mobile Homes.

For installation in mobile housing, refer to Figure 18 for Direct Vent Terminal Clearances.

The appliance shall be disconnected from the gas supply piping system during any pressure testing of the system.

The appliance and its gas connections shall be leak tested before placing the appliance in operation.

All air for combustion must be supplied from outside the structure. Air for combustion must not be supplied from occupied spaces.

INSTALLATION INSTRUCTIONS

0 inches. Provide room for access to rear of heater for servicing.

INSTALLATION USING HINGED DOOR

(See Figure 3 on page 4, for illustration)

- A. Position heater into framed opening as illustrated.
- B.
- C. Caulk around framed opening (trailer skin) as illustrated.
- D. Lay a bead of silicone caulking (or suitable caulking) around the inner edge of the control housing (top, bottom and sides). See detail "A" in Figure 3. This
- E. Apply a bead of silicone caulking (or suitable caulking) around back side of
- F. Fit the door frame into control housing (over the caulking already applied) and provided.
- G.

NOTE

used to mount door hinge to the frame.

- H.
- I. Attach door to frame as illustrated.
- J. Close the door so that the door latch protrudes through the slot in the door. Turn latch 90 degrees to fasten door.
- K. The module board on models SW4D, SW6D and SW6DE is not secured to

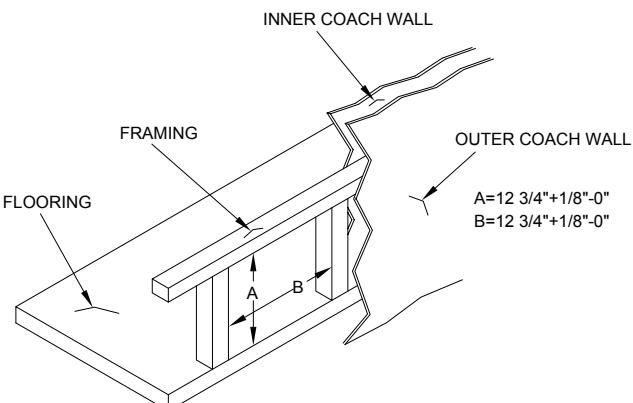


Figure 1

INSTALLATION USING FLUSH MOUNT FRAME & DOOR

(See Figure 4 on page 4, for illustration)

- A. Position heater into framed opening as illustrated in Figure 4. Slide unit into housing and the door frame.
- B.

important to not over tighten the fastener and distort the control housing. Over housing and the door frame.

NOTE

- C.
- D.
- E. Caulk around framed opening (trailer skin) as illustrated in Figure 4.
- F. Caulk around door frame using 2 beads of silicone caulking (or suitable of frame to seal to coach skin. (See detail A in Figure 4).
- G.
- H. pins on the frame. Close the door so that the latch protrudes through the slot in the door. Turn latch 90 degrees to fasten door.
- I. The module board on models SW4D, SW6D and SW6DE is not secured to

08/C22.2 No. 148-08 Electrical Requirements for Recreational Vehicles and CSA

vehicles and mobile homes respectively.

- D. illustrated in Figure 5.

1. Provide a constant voltage supply
2. Filter any A.C. spikes or volt surges

We recommend insulated terminals be used for all electrical connections.

MAKING ELECTRICAL CONNECTIONS 120 VOLTS A.C. (See Figure 6)

- A.

- B.

- C.

regulations. In the absence of local codes and regulations, refer to the latest edition of the National Electrical Code NFPA 70.

08/C22.2 No. 148-08. Electrical requirements for Recreational Vehicles and CSA vehicles and mobile homes respectively.

- D.

CAUTION:

WARNING!

MAKING ELECTRICAL CONNECTIONS 12 VOLTS D.C. (See Figure 5)

- A.
- B.
- models SW6DM and SW6DEM.
- C. regulations. In the absence of local codes and regulations, refer to the latest edition of the National Electrical Code NFPA 70.

MAKING WATER CONNECTIONS

- A.


7 for all models except SW6DM and SW6DEM. For SW6DM and SW6DEM,

"COLD". NOTE

IMPORTANT

DO NOT REMOVE PLASTIC FILL TUBE.

WATER HEATER AS VIEWED FROM INSIDE R.V. CHAUFFEE-EAU VU DEPUIS L'INTÉRIEUR DU R.V.

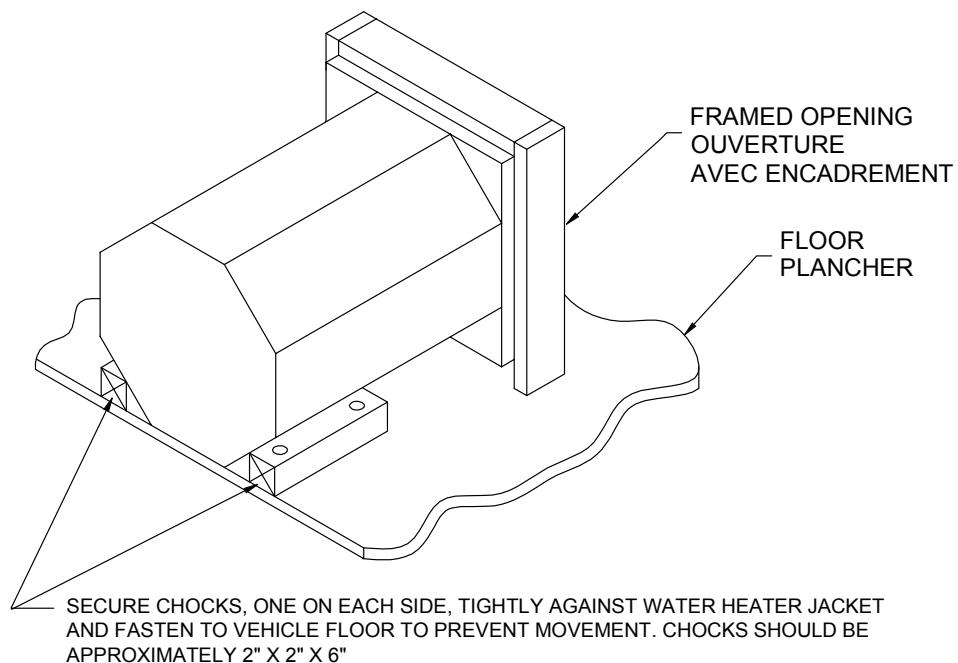

INSTALLER UNE CALE DE CHAQUE CÔTÉ EN CONTACT AVEC LA CHEMISE DU CHAUFFEE-EAU. FIXER LES CALES AU PLANCHER POUR QU'ELLES NE PUISSENT BOUGER. UTILISER DES CALES DE 2PO X 2PO X 6PO ENVIRON.

Figure 2

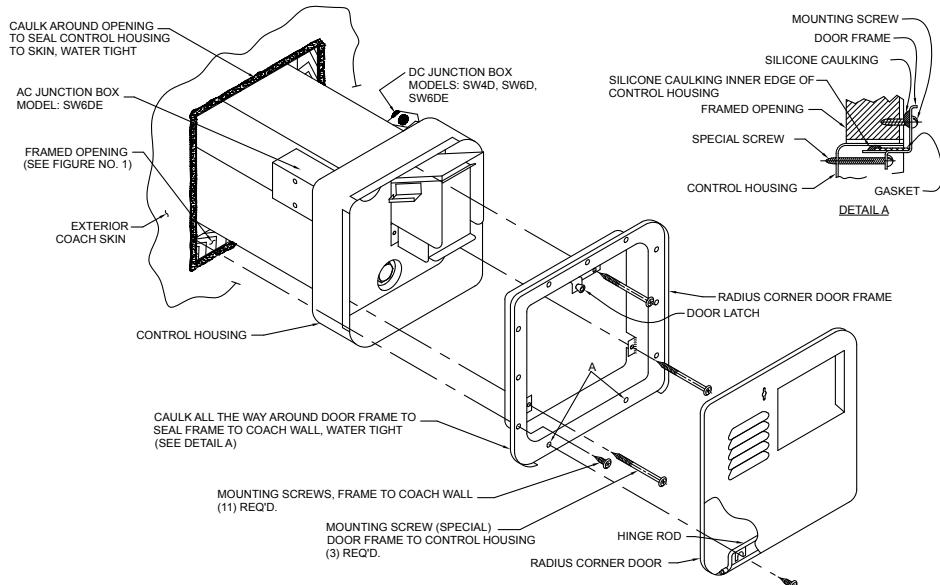


Figure 3

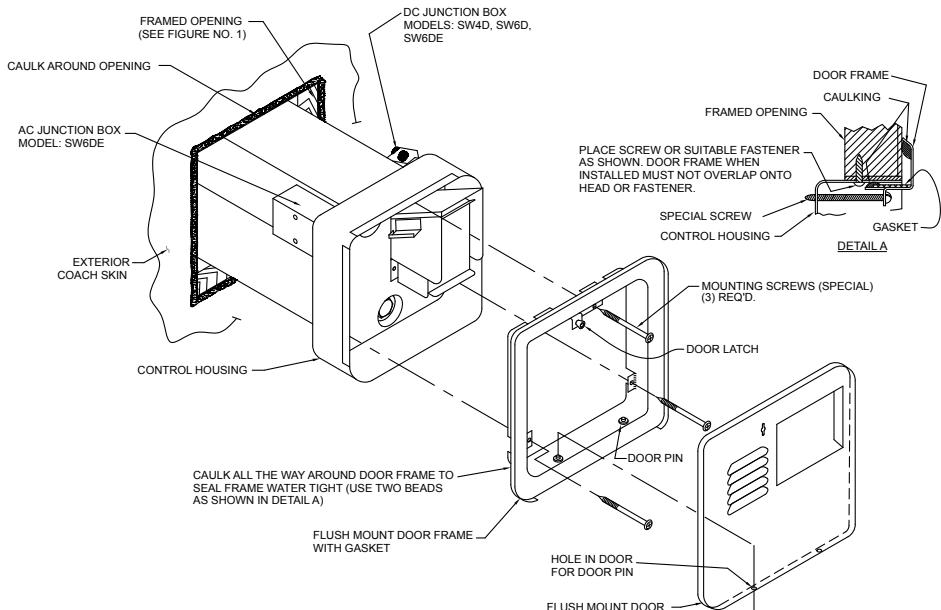


Figure 4

- B. For ease of removal, it is suggested that a pipe union be installed in each
- C.

check all connections for leaks.

CAUTION: If you use air pressure to check for leaks, the pressure must not exceed 30 PSI

NOTE

MAKING GAS CONNECTIONS

- A.

be necessary to remove the grommet from the control housing, make the gas connection at the valve, then reinstall grommet.

WARNING! It is imperative that grommet and gas line through grommet be caulked air opening and into living area of trailer. (See Figure 10.)

- B.

WARNING!

INSTALLATION OF MOTOR AID HEAT EXCHANGER

- A.
- B.
- C. Attach hose from motor-aid heat exchanger to "Y"s.
- D.
- E.

The system should be checked annually for deterioration of heater hose and hose connections. Replace as needed.

SAFETY INFORMATION FOR YOUR SAFETY READ BEFORE LIGHTING

WARNING!

property damage or loss of life.

OPERATING AND LIGHTING INSTRUCTIONS

WARNING!

WARNING: Warnings".

A.

B. BEFORE LIGHTING smell all around the appliance area for gas. Be sure to

WHAT TO DO IF YOU SMELL GAS

- Do not try to light any appliance.
-
- Do not use any phone in your building.
-
- supplier's instructions.
-

C

D.

E.

OPERATING INSTRUCTIONS

- 1.
- 2.
3. Turn "OFF" gas supply.
4. instructions in item B of the **SAFETY INFORMATION**. If you don't smell gas, go to next step.
5. Turn "ON" gas supply.
- 6.
- 7.

have a 15 second purge before spark cycle if system is a three try system.

8.

may require several ignition cycles before all air is purged from the gas lines.

calling a service person.

A.

- B. Gas supply to heater is empty or turned off.
- C. Reset button on ECO is tripped. (See Figure 14)

9. If burner fails to light and/or electric element does not operate, call a Suburban service center or a local RV service agency.

OPERATING INSTRUCTIONS FOR UNITS WITH ELECTRIC ELEMENT

THERMOSTAT AND MANUAL RESET

MODELS: SW4D, SW6D, and SW6DM (See Figure 14)

as a cut-off device. Temperature above 180°

°F, push reset button to re-activate burner. ECO reset button for 12 volt DC spark ignition is located behind grommet (A). Push in on grommet (A) to reset system.

THERMOSTAT AND MANUAL RESET

MODELS SW6DE and SW6DEM (See Figure 15)

as a cut-off device. Temperature above 180°

°F, push reset button to re-activate the electric element. ECO reset button for 120 volts AC electric element is located behind grommet (B). Push in on grommet (B) to reset system.

HIGH ALTITUDE DERATION

above this elevation may require derating by 4 percent for every 1,000 feet approximately 32 percent.

may produce improper burner operation. Pilot outage caused by burner lift-off of incomplete combustion of the burner at these higher altitudes.

Suburban Manufacturing Company for proper derating of the unit. Change-out of

NOTE

reversed for proper operation of the unit.

TO TURN OFF WATER HEATER

- 1.
- 2.
3. Turn off gas supply.
- 4.

Instructions.")

MAINTENANCE

WARNING!

shipped from the factory or if the appliance is not used solely for its intended purpose or if property damage or loss of life.

WARNING!

service person.

A.

B.

person. Soot is a sign of incomplete combustion and must be corrected

- 1.
2. Check the screen in the door to see that no foreign material has
- 3.

- C. Frequent checks should be made of the grommet on the gas inlet to assure tight seal. (See "Making Gas Connections").

- D. damaged/frayed and that all terminals and connections are tight and in

DRAINING AND STORAGE INSTRUCTIONS

prevent damage from freezing.

1. element or a breaker.
- 2.
- 3.
- 4.
5. Remove anode rod from tank.
- 6.

NOTE

WINTERIZING

is

heater closed off (out of the system) in the bypass position *particularly* if you are introducing antifreeze into the plumbing system. Antifreeze can be very corrosive to the anode rod creating premature failure and heavy sediment in the tank. If the

ANODE PROTECTION

it be replaced yearly. **NOTE**

Figure 17)

anode's tank protection.

NOTE: Tank is drained by removing anode rod (See "Drain and Storage" instructions).

WARNING!

such as an "add-on" electric heating element. Items such as these are not approved to be

ODOR FROM HOT WATER SYSTEM

six (6) ounces of chlorinated common household liquid bleach to each 10 gallons

rod as necessary.

PRESSURE RELIEF VALVE

The temperature and pressure relief valve is designed to open if the temperature

does not indicate a defective relief valve.

WARNING!

relief valve under any circumstances.

WATER WEEPING OR DRIPPING FROM PRESSURE RELIEF VALVE

Suburban recommends that a check valve not be installed directly at the inlet

WARNING! Do not remove or plug the relief valve.

To replenish this air pocket:

- 1.
- 2.
3. Open a faucet in the RV.
- 4.
5. Release handle on P & T Valve - it should snap closed.

the tank and check valve to relieve the pressure caused by thermal expansion. Contact your local dealer for assistance.

REMOVING WATER HEATER

- 1.
- 2.
- 3.
- 4.
5. "Draining and Storage".
- 6.
- 7.
- 8.

PARTS AND SERVICE

Contact a conveniently located recommended Suburban Service Center. Describe to them the nature of your problem, make an appointment, if necessary,

To obtain information on locating a local service agency, contact:

AIRXCEL, Inc., Suburban Division
Customer Service Department

Dayton, TN 37321
(423) 775-2131 Ext. 7101

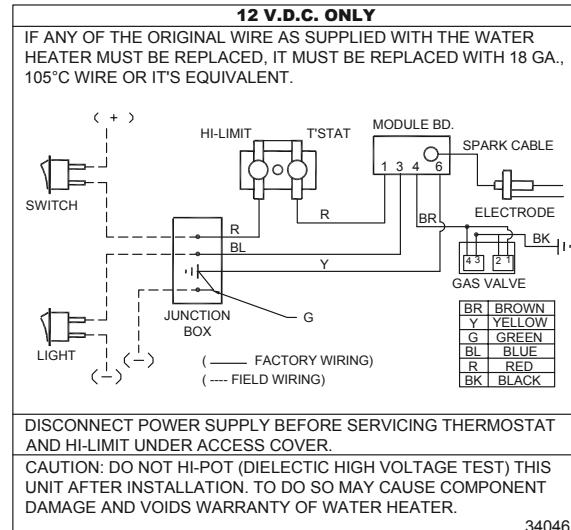


Figure 5

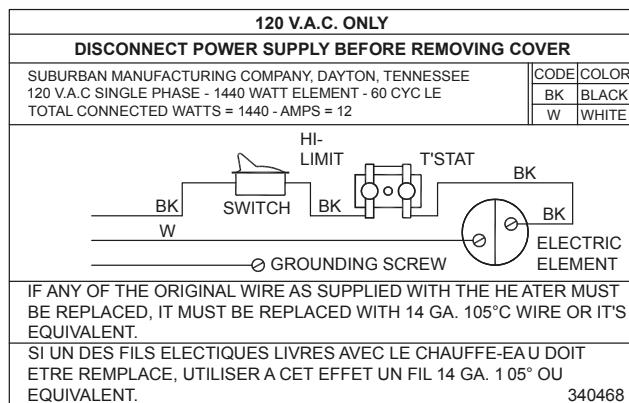


Figure 6

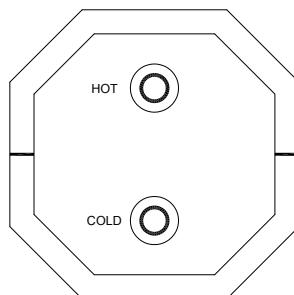


Figure 7

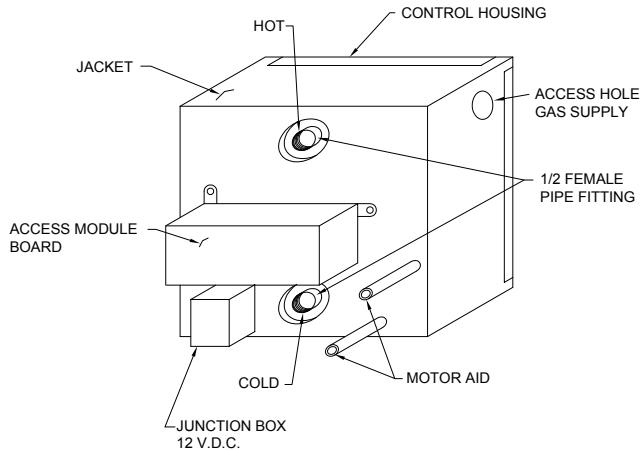


Figure 8

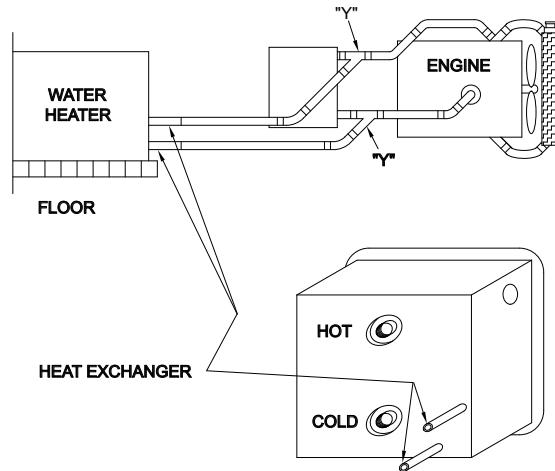


Figure 11

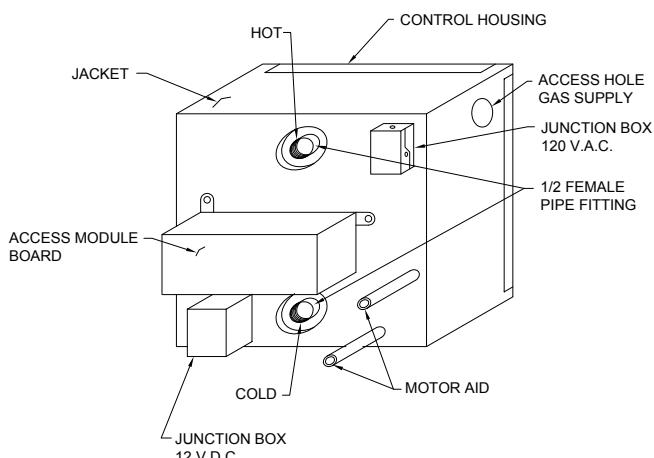


Figure 9

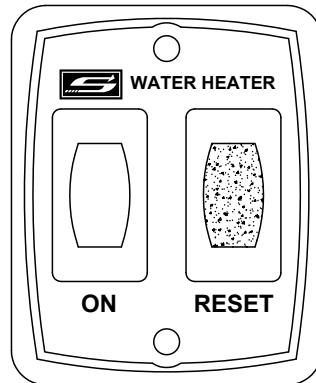


Figure 12

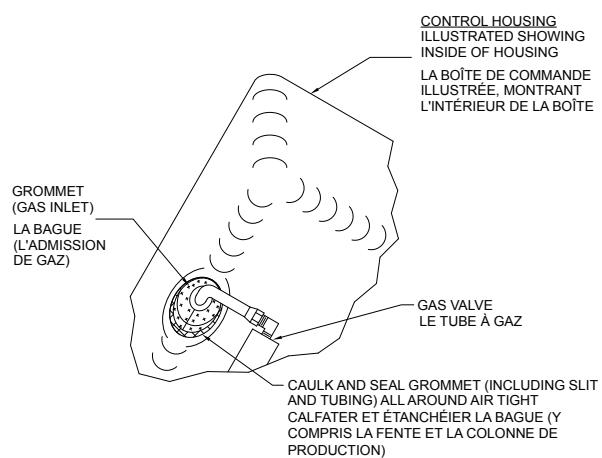


Figure 10

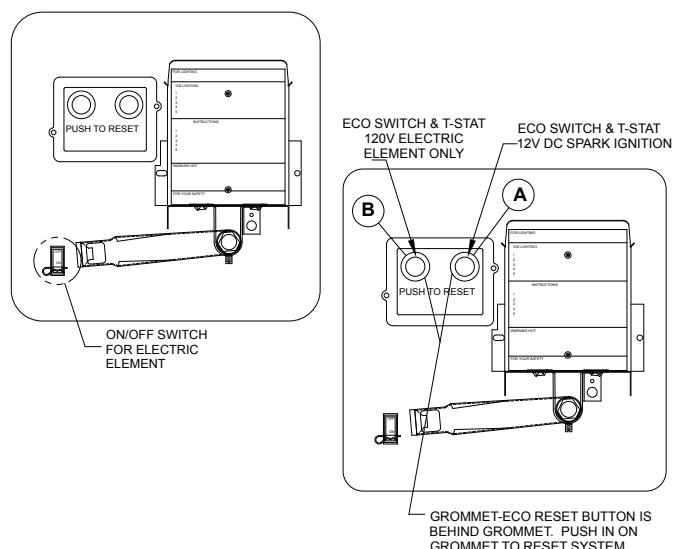
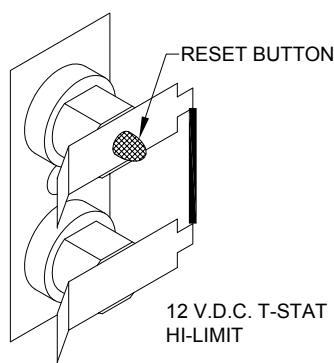


Figure 13



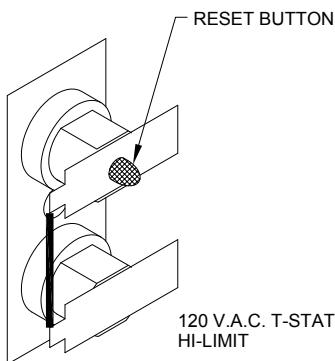


Figure 15

CORRECT
CORRIGER

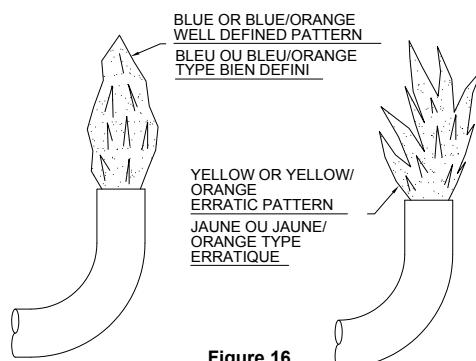


Figure 16


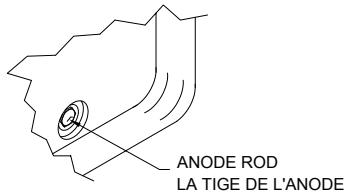


Figure 17

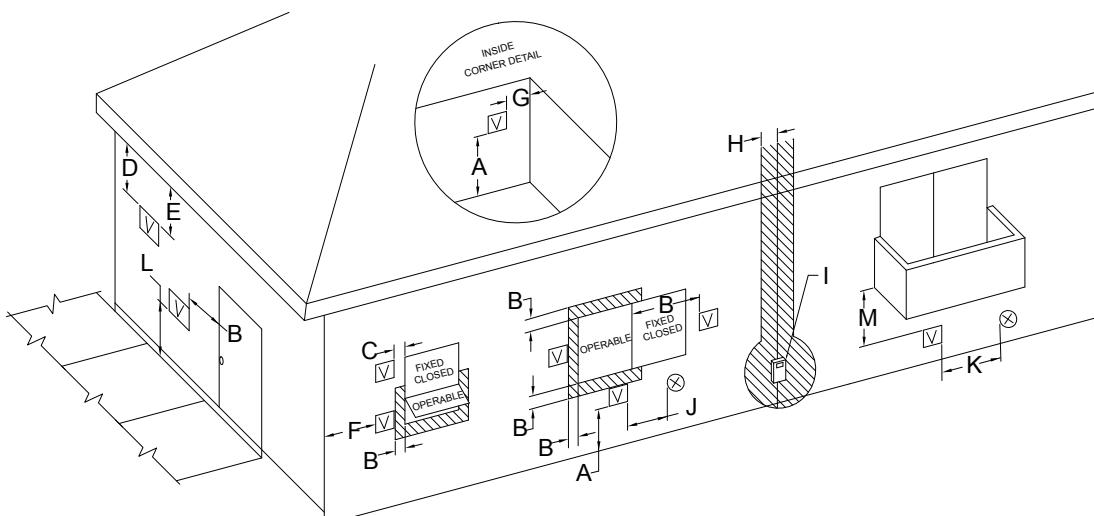

VENT TERMINAL

CANADIAN INSTALLATIONS ¹

A= CLEARANCE ABOVE GRADE, VERANDA, PORCH, DECK, OR BALCONY

12 INCHES (30cm)

AIR SUPPLY INLET

US INSTALLATIONS ²

12 INCHES (30cm)

B= CLEARANCE TO WINDOW OR DOOR THAT MAY BE OPENED

12 INCHES (30cm)

9 INCHES (23cm)

C= CLEARANCE TO PERMANENTLY CLOSED WINDOW

*

*

D= VERTICAL CLEARANCE TO VENTILATED SOFFIT LOCATED ABOVE THE TERMINAL WITHIN A HORIZONTAL DISTANCE OF 2 FT (61cm) FROM THE CENTER LINE OF THE TERMINAL

*

*

E= CLEARANCE TO UNVENTILATED SOFFIT

*

*

F= CLEARANCE TO OUTSIDE CORNER

*

*

G= CLEARANCE TO INSIDE CORNER

*

*

H= CLEARANCE TO EACH SIDE OF CENTER LINE EXTENDED ABOVE METER / REGULATOR ASSEMBLY

3 FEET (91cm) WITHIN A HEIGHT 15 FEET (4.57m) ABOVE THE METER / REGULATOR ASSEMBLY

*

I= CLEARANCE TO SERVICE REGULATOR VENT OUTLET

3 FEET (91cm)

*

AREA WHERE TERMINAL IS NOT PERMITTED

CANADIAN INSTALLATIONS ¹

J= CLEARANCE TO NONMECHANICAL AIR SUPPLY INLET TO BUILDING OR THE COMBUSTION AIR INLET TO ANY OTHER APPLIANCE

12 INCHES (30cm)

4 FEET (1.2m) BELOW OR TO SIDE OF OPENING; 1 FEET (300mm) ABOVE OPENING

K= CLEARANCE TO A MECHANICAL AIR SUPPLY INLET

6 FEET (1.83m)

3 FEET (91cm) ABOVE IF WITHIN 10 FEET (3m) HORIZONTALLY

L= CLEARANCE ABOVE PAVED SIDEWALK OR PAVED DRIVEWAY LOCATED ON PUBLIC PROPERTY

7 FEET (2.13m)

*

M= CLEARANCE UNDER VERANDA, PORCH, DECK, OR BALCONY

12 INCHES (30cm)

*

¹ IN ACCORDANCE WITH THE CURRENT CSA B149.1, NATURAL GAS AND PROPANE INSTALLATION CODE

² IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE

* A VENT SHALL NOT TERMINATE DIRECTLY ABOVE A SIDEWALK OR PAVED DRIVEWAY THAT IS LOCATED BETWEEN TWO SINGLE FAMILY DWELLINGS AND SERVES BOTH DWELLINGS.

* PERMITTED ONLY IF VERANDA, PORCH, DECK, OR BALCONY IS FULLY OPEN ON A MINIMUM OF TWO SIDES BEHIND THE FLOOR.

* CLEARANCE IN ACCORDANCE WITH LOCAL INSTALLATION CODES AND THE REQUIREMENTS OF THE GAS SUPPLIER.

Figure 18

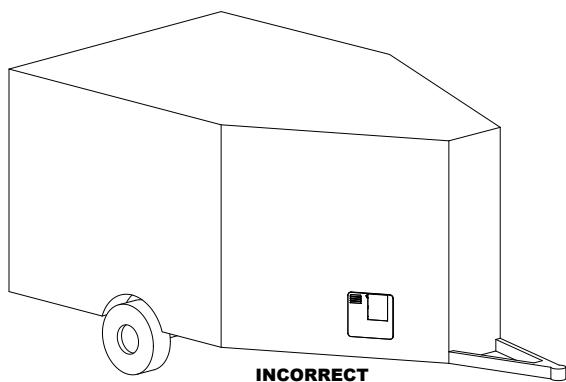


Figure 19

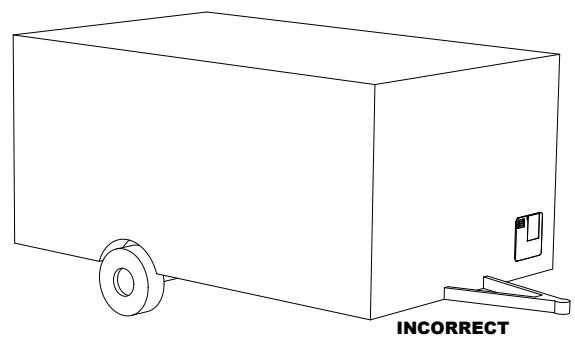


Figure 20

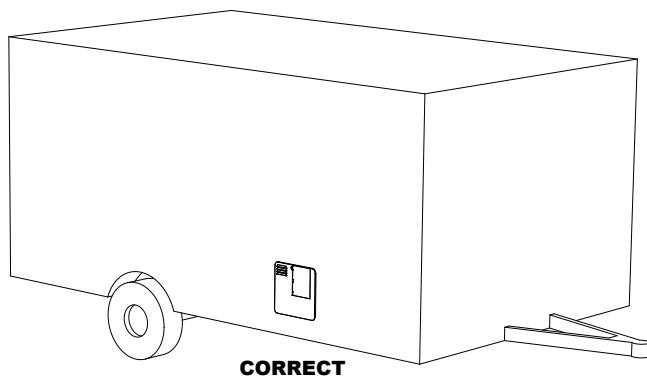


Figure 21

TWO YEAR LIMITED WARRANTY SUBURBAN RECREATIONAL VEHICLE WATER HEATER

TWO YEAR LIMITED WARRANTY

proof of purchase date through a Bill of Sale or other payment records.

center for Suburban. **DO NOT PAY THE SERVICE AGENCY FOR WARRANTY REPAIRS; SUCH PAYMENTS WILL NOT BE REIMBURSED.** recommended service

and date of installation.

by Suburban.

THREE YEAR LIMITED WARRANTY ON TANK

provided.

LIMITATION OF WARRANTIES

ALL IMPLIED WARRANTIES (INCLUDING IMPLIED WARRANTIES OF MERCHANTABILITY) ARE HEREBY LIMITED IN DURATION TO THE PERIOD FOR WHICH EACH LIMITED WARRANTY IS GIVEN. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU. THE EXPRESSED WARRANTIES MADE IN THIS WARRANTY ARE EXCLUSIVE AND MAY NOT BE ALTERED, ENLARGED, OR CHANGED BY ANY DISTRIBUTOR, DEALER OR OTHER PERSON WHOMSOEVER.

SUBURBAN WILL NOT BE RESPONSIBLE FOR:

1. component parts or from its use.
- 2.
- 3.
4. voltage.
- 5.
- 6.
7. Parts or accessories not supplied by Suburban.
8. Freight charges incurred from parts replacements.
9. Damage or repairs needed as a consequence of any misapplication, abuse, unreasonable use, unauthorized alteration, improper service, improper operation or failure to provide reasonable and necessary maintenance.
- 10.
- 11.
- 12.
13. ANY SPECIAL, INDIRECT OR CONSEQUENTIAL PROPERTY, ECONOMIC OR COMMERCIAL DAMAGE OF ANY NATURE WHATSOEVER

NO REPRESENTATIVE, DEALER, RECOMMENDED SERVICE CENTERS OR OTHER PERSON IS AUTHORIZED TO ASSUME FOR SUBURBAN MANUFACTURING COMPANY ANY ADDITIONAL, DIFFERENT OR OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS SUBURBAN PRODUCT.

IF YOU HAVE A PRODUCT PROBLEM

FIRST:

manufacturer of the RV.

SECOND: Contact a conveniently located recommended Suburban Service Center. Describe to them the nature of your problem, make an appointment, if necessary, and provide for delivery of your RV to the selected service center.

THIRD: For the location of the nearest Service Center, refer to the listing provided or contact:

AIRXCEL, INC. - SUBURBAN DIVISION
Customer Service Department

Dayton, Tennessee 37321
(423) 775-2131, Ext. 7101

FOR FUTURE REFERENCE, YOU SHOULD RECORD THE FOLLOWING INFORMATION:

MODEL NUMBER: _____

SERIAL NUMBER: _____

STOCK NUMBER: _____

DATE OF PURCHASE: _____



TOIT D'ABORD : SI le véhicule recouvert est encore équipée de son chauffe-eau d'origine et est encore couverte par la garantie de son constructeur, procéder conformément aux instructions de concessions ou contactez votre service clientèle.	TOUS PROBLÈME SE MANIFESTE : Si un problème se manifeste, contacter un centre de service Suburban recommandé peu éloigné. Décrire la nature du problème au technicien, prendre rendez-vous si c'est nécessaire, ou organiser la livraison de votre véhicule recommandé au centre de service choisi.
NUMÉRO DE SÉRIE : _____	DATE D'ACHAT : _____
NUMÉRO DE MODÈLE : _____	NOMBRE D'IMAGES : _____
POUR RÉFÉRENCE ULTÉRIEURE, VOUS DEVEZ ENREGISTRER LES INFORMATIONS SUIVANTES :	

DEUXIÈMEMENT : Contacter un centre de service Suburban recommandé peu éloigné. Décrire la nature du problème au technicien, prendre rendez-vous si c'est nécessaire, ou organiser la livraison de votre véhicule recommandé au centre de service Suburban recommandé auquel vous avez acheté le véhicule.

TROISIÈMEMENT : Contacter un centre de service Suburban recommandé peu éloigné. Décrire la nature du problème au technicien, prendre rendez-vous si c'est nécessaire, ou organiser la livraison de votre véhicule recommandé au centre de service Suburban recommandé auquel vous avez acheté le véhicule.

TOUT D'ABORD : Si le véhicule recouvert est encore équipée de son chauffe-eau d'origine et est encore couverte par la garantie de son constructeur, procéder conformément aux instructions de concessions ou contactez votre service clientèle.

SUBURBAN.
NOM DE SUBURBAN MANUFACTURING COMPANY DES OBLIGATIONS ADDITIONNELLES OU DIFFÉRENTES EN RAPPORT AVEC LA VENTE DE CE PRODUIT

1. SUBURBAN N'ACCÉPTE RAUCUNE RESPONSABILITÉ AU TITRE DE :
MODIFIES, ETENDUES OU PROLONGÉES PAR UN DISTRIBUTEUR, CONCESSAIRE OU AUTRE PERSONNE.
2. Le nettoyage ou remplacement du gicleur du brûleur. Les dégâts provoqués par l'eau, décaulant directement ou indirectement d'un défaut du chauffe-eau ou d'un composant, ou de son utilisation.
3. Inspection initiale et inspections ultérieures liquiduant que l'appareil fonctionne correctement, ou diagnostic sans réparation.
- 4.
5. Nettoyage ou râlage pour compasants, électrode, tube de brûleur, brûleur de veille et thermocouple.
6. Frais rendus nécessaires pour l'accès à l'appareil.
7. Pièces ou accessoires non fournis par Suburban.
8. Frais de transport afférants au remplacement de pièces.
- 9.
10. Inorrecte ou carence d'enfretien.
- 11.
12. Dommages imprévisibles à l'ondulation, vent, foudre, accident atmosphérique corrosive et autres situations que Suburban ne peut contrôler.
13. DOMMAGES SECONDAIRES OU INDIRECTS MATÉRIELS, ÉCONOMIQUES OU COMMERCIAUX, QUELLE QU'EN SOIT LA NATURE.

LIMITATION DES GARANTIES

LA PÉRIODE DE VALIDITÉ DES GARANTIES IMPLICITES (CECI INCLUTANT LES GARANTIES IMPLICITES DE QUALITÉ MARCHAND) EST EXPRESSEMENT

Suburban ne remboursera aucun frais de main-d'œuvre.

Le réservoir intérieur est également garanti contre défaillance ou de fabrication pendant une période de trois ans à compter de la date de

GARANTIE LIMITÉE SUR LE RÉSERVOIR - TROIS ANS

Pour obtenir les services nécessaires sous garantie, le propriétaire devrait contacter le plus proche centre de service Suburban recommandé, en mentionnant le numéro de modèle et le numéro de série (indiquer sur l'appareil), et la nature de l'anomalie. Le propriétaire/utilisateur doit assumer les frais de transport du véhicule jusqu'à son domicile et le centre de service, ou les frais de déplacement du personnel du centre de service. On peut obtenir une liste récente des centres de réparation en contactant notre département de service au numéro 423-775-2131 avant d'effectuer les réparations pour obtenir une autorisation. Suburban ne paiera pas les réparations effectuées sans autorisation.

de retourner le chauffe-eau à ses composants à Suburban ou à son représentant. Un chauffe-eau retourné doit comprendre tous ses composants et la plaque de garantie sous garantie qui comporte une date de fabrication et une date d'origine.

Rechange serrant expédiees F-a-B. Point d'expédition au centre de service Suburban recommandé effectuant les réparations dans les états contigus des Etats-Unis, au cours des deux premières années, Suburban remplacea toute pièce suivante entière de déféculement, et versera une allocation de main-d'œuvre sous garantie pour sa garantie standard. Le propriétaire doit soumettre une preuve de la période de garantie. Suburban n'utilise pas de centre d'enregistrement de la garantie pour les garanties F-a-B.

normales d'utilisation et d'entretien, pendant une période de deux ans à compter de la date d'achat, que l'appareil soit ou non mis en service à cette date. C'est au consommateur/propriétaire qu'incombe la responsabilité de faire la preuve de la période de garantie. Suburban n'utilise pas de centre d'enregistrement de la garantie pour sa garantie standard.

pour sa garantie standard. Le propriétaire doit soumettre une preuve de la période de garantie. Suburban n'utilise pas de centre d'enregistrement de la garantie pour sa garantie standard. Le propriétaire doit soumettre une preuve de la période de garantie. Suburban n'utilise pas de centre d'enregistrement de la garantie pour sa garantie standard.

GARANTIE LIMITÉE DE DEUX ANS

SUBURBAN - CHAUFFE-EAU POUR VÉHICULE RECÉPATEL GARANTIE LIMITÉE DE DEUX ANNÉES

Figure 21

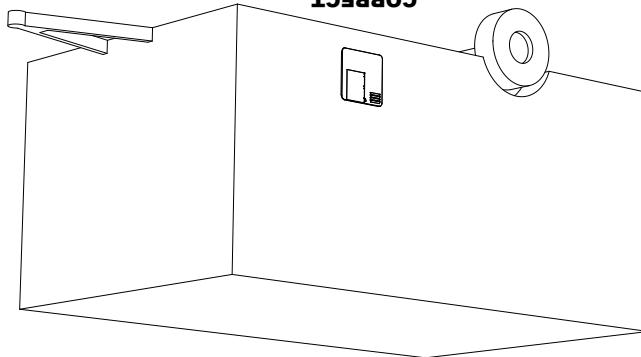


Figure 20



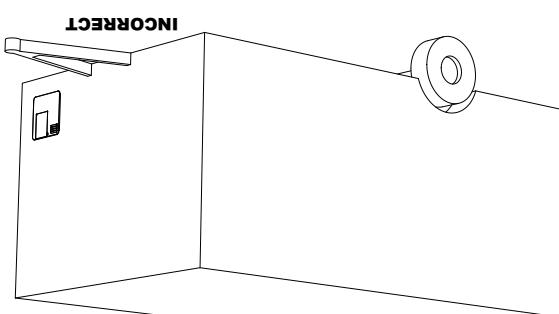


Figure 18

Figure 19

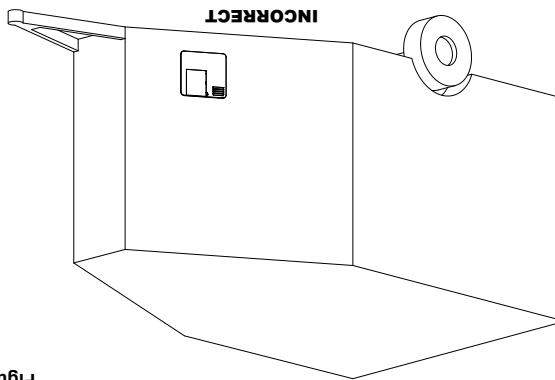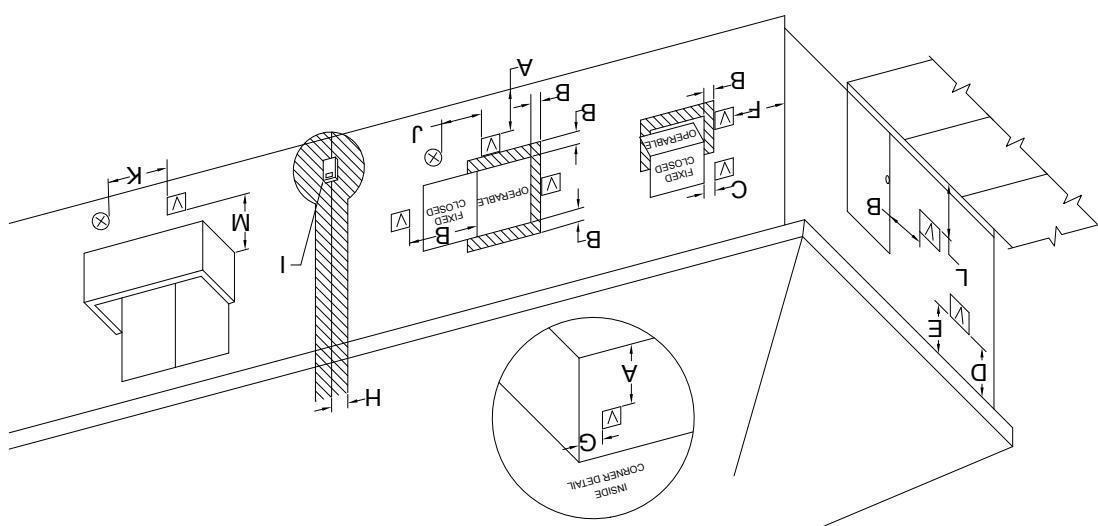

A=	CLEARANCE ABOVE GRADE	12 INCHES (30cm)	12 INCHES (30cm)	12 INCHES (30cm)	= CLEARANCE TO NOMECHANICAL	4 FEET (1.2m) BELOW OR TO SIDE	BLOWN-IN AIR SUPPLY LINE TO INTAKE AIRPIPELINE	TO ANY OTHER AIRPIPELINE	DOOR THAT WILL BE OPENED	CLOSED WINDOW OR	CLEARANCE TO PERMANENTLY	C=	
B=	CLEARANCE TO WINDOW OR	12 INCHES (30cm)	9 INCHES (23cm)	6 FEET (1.83m)	K= CLEARANCE TO MECHANICAL	3 FEET (0.91m) ABOVE IF WITHIN 10 FEET (3m) HORIZONTAL DISTANCE	10 FEET (3m) HORIZONTAL DISTANCE	7 FEET (2.13m) +	L= CLEARANCE ABOVE PUBLIC PROPERTY	7 FEET (2.13m) +	M= CLEARANCE UNDER ECRONDA.	D= VERTICAL CLEARANCE TO	E= CLEARANCE TO UNVENTILATED SOFT
C=	CLOSED WINDOW	12 INCHES (30cm)	9 INCHES (23cm)	6 FEET (1.83m)	K= CLEARANCE TO MECHANICAL	3 FEET (0.91m) ABOVE IF WITHIN 10 FEET (3m) HORIZONTAL DISTANCE	10 FEET (3m) HORIZONTAL DISTANCE	7 FEET (2.13m) +	L= CLEARANCE ABOVE PUBLIC PROPERTY	7 FEET (2.13m) +	M= CLEARANCE UNDER ECRONDA.	D= VERTICAL CLEARANCE TO	E= CLEARANCE TO UNVENTILATED SOFT
D=	OF THE TERRAIN	*	*	*	*	*	*	*	*	*	*	F= CLEARABILITY OF SOFT COATED A	G= CLEARABILITY OF OUTSIDE CORNER
E=	CLEARANCE TO UNVENTILATED SOFT	*	*	*	*	*	*	*	*	*	*	F= CLEARABILITY OF SOFT COATED A	G= CLEARABILITY OF OUTSIDE CORNER
F=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	H= CLEARANCE TO EACH SIDE ABOVE	I= CLEARANCE WITHIN HEIGHT 15 FEET / REGULATOR
G=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	H= CLEARANCE TO EACH SIDE ABOVE	I= CLEARANCE WITHIN HEIGHT 15 FEET / REGULATOR
H=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	J= CLEARANCE IN ACCORDANCE WITH LOCAL INSTALLATION CODES AND THE REQUIREMENTS OF THE GAS SUPPLIER	K= CLEARANCE IN ACCORDANCE WITH LOCAL INSTALLATION CODES AND THE REQUIREMENTS OF THE GAS SUPPLIER
I=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	J= CLEARANCE IN ACCORDANCE WITH LOCAL INSTALLATION CODES AND THE REQUIREMENTS OF THE GAS SUPPLIER	K= CLEARANCE IN ACCORDANCE WITH LOCAL INSTALLATION CODES AND THE REQUIREMENTS OF THE GAS SUPPLIER
J=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	L= CLEARABILITY ONLY FOR EXHAUST FLOW	M= CLEARABILITY ONLY FOR EXHAUST FLOW
K=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	L= CLEARABILITY ONLY FOR EXHAUST FLOW	M= CLEARABILITY ONLY FOR EXHAUST FLOW
L=	CLEARABILITY ONLY FOR EXHAUST FLOW	*	*	*	*	*	*	*	*	*	*	N= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE	O= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE
M=	CLEARABILITY ONLY FOR EXHAUST FLOW	*	*	*	*	*	*	*	*	*	*	N= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE	O= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE
O=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	P= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE	Q= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE
P=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	P= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE	Q= IN ACCORDANCE WITH THE CURRENT ANSI Z223.1/NFPA 54, NATIONAL FUEL GAS CODE
Q=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	R= PERMITTED ONLY FOR EXHAUST FLOW	S= PERMITTED ONLY FOR EXHAUST FLOW
R=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	R= PERMITTED ONLY FOR EXHAUST FLOW	S= PERMITTED ONLY FOR EXHAUST FLOW
S=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	T= PERMITTED ONLY FOR EXHAUST FLOW	U= PERMITTED ONLY FOR EXHAUST FLOW
U=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	T= PERMITTED ONLY FOR EXHAUST FLOW	U= PERMITTED ONLY FOR EXHAUST FLOW
V=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	W= PERMITTED ONLY FOR EXHAUST FLOW	X= PERMITTED ONLY FOR EXHAUST FLOW
W=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	W= PERMITTED ONLY FOR EXHAUST FLOW	X= PERMITTED ONLY FOR EXHAUST FLOW
X=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	Y= PERMITTED ONLY FOR EXHAUST FLOW	Z= PERMITTED ONLY FOR EXHAUST FLOW
Z=	CLEARABILITY OF OUTSIDE CORNER	*	*	*	*	*	*	*	*	*	*	Y= PERMITTED ONLY FOR EXHAUST FLOW	Z= PERMITTED ONLY FOR EXHAUST FLOW
A=	REGULATOR TO OUTLET	*	*	*	*	*	*	*	*	*	*	AA= REGULATOR TO OUTLET ASSEMBLY	BB= REGULATOR TO OUTLET ASSEMBLY
BB=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	CC= REGULATOR TO OUTLET ASSEMBLY	DD= REGULATOR TO OUTLET ASSEMBLY
CC=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	EE= REGULATOR TO OUTLET ASSEMBLY	FF= REGULATOR TO OUTLET ASSEMBLY
EE=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	GG= REGULATOR TO OUTLET ASSEMBLY	HH= REGULATOR TO OUTLET ASSEMBLY
GG=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	II= REGULATOR TO OUTLET ASSEMBLY	JJ= REGULATOR TO OUTLET ASSEMBLY
II=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	KK= REGULATOR TO OUTLET ASSEMBLY	LL= REGULATOR TO OUTLET ASSEMBLY
LL=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	MM= REGULATOR TO OUTLET ASSEMBLY	NN= REGULATOR TO OUTLET ASSEMBLY
NN=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	OO= REGULATOR TO OUTLET ASSEMBLY	PP= REGULATOR TO OUTLET ASSEMBLY
OO=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	QQ= REGULATOR TO OUTLET ASSEMBLY	RR= REGULATOR TO OUTLET ASSEMBLY
RR=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	SS= REGULATOR TO OUTLET ASSEMBLY	TT= REGULATOR TO OUTLET ASSEMBLY
TT=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	UU= REGULATOR TO OUTLET ASSEMBLY	VV= REGULATOR TO OUTLET ASSEMBLY
VV=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	WW= REGULATOR TO OUTLET ASSEMBLY	XX= REGULATOR TO OUTLET ASSEMBLY
XX=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	YY= REGULATOR TO OUTLET ASSEMBLY	ZZ= REGULATOR TO OUTLET ASSEMBLY
ZZ=	REGULATOR TO OUTLET ASSEMBLY	*	*	*	*	*	*	*	*	*	*	AA= REGULATOR TO OUTLET ASSEMBLY	BB= REGULATOR TO OUTLET ASSEMBLY



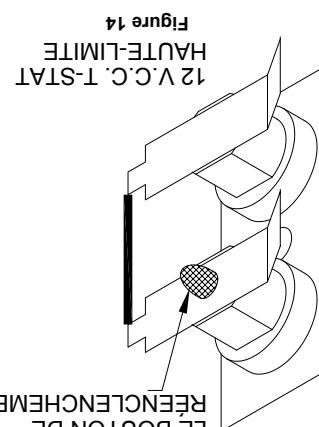
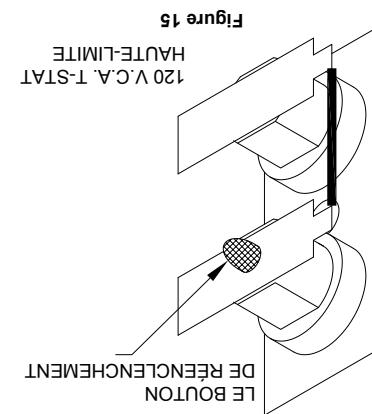


Figure 17

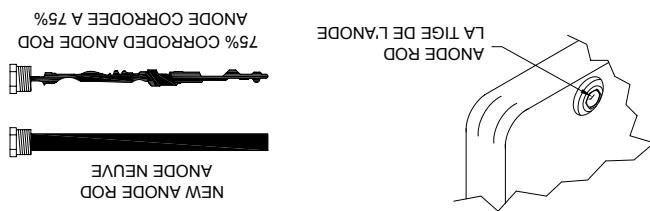


Figure 16



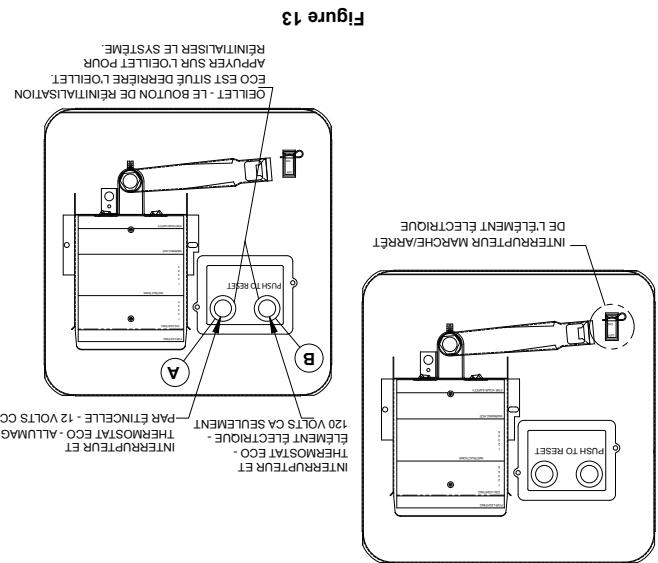


Figure 12

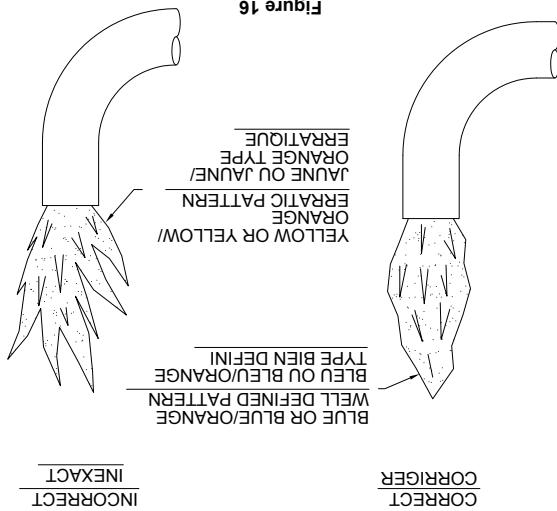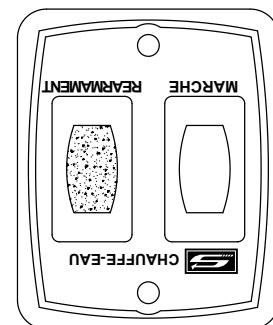

AVERTISSEMENT

B. Quand le gaz est regaréder aux tous les racordas et les branchemens pour les filies, ouvrir le gaz et regaréder aux tous les solution de savon et de l'eau. Corriger même la fuite si plus légere immédiatement.

AVERTISSEMENT! Ces informations sont destinées à la vente de gaz à travers la baguette et ne doivent pas être utilisées pour la préparation des aliments. L'humidité et les températures élevées peuvent déclencher des réactions chimiques dans la région du rhéostat qui débouchent sur une défaillance de la régulation de la température. (Voir la Figure 10.)

COMBIMENT FAIRE LES BRANCHEDENTS DE GAZ
A. Brancheder la condutte d'alimentation de gaz de 3/8" au racord dévassement de 3/8" au tube à la botte de connexion de la soufflerie puis réinsérer la bague.
3/8 au tube à gaz sticla la botte de connexion de la soufflerie puis réinsérer la bague.
3/8 au tube à gaz sticla la botte de connexion de la soufflerie puis réinsérer la bague.
La soufflerie peut être enlevée pour effectuer des réparations ou pour débrancher le système.

COMMENT FAIRE LES BRANCHEMENTS D'EAU
A. Les branchements d'eau sont larmés à chauffer-eau. Se référer à la Figure 7 pour tous les modèles sauf le SW6DEM. Pour les modèles SW6DM et SW6DEM, se référer aux Figures 8 et 9. Brancher les rehausser la circulation de l'eau. NE PAS ENLEVER LE TUBE DE REMBLAI
NOTE

COMMENT FAIRE LES BRANCHEMENTS DE GAZ

Figure 4


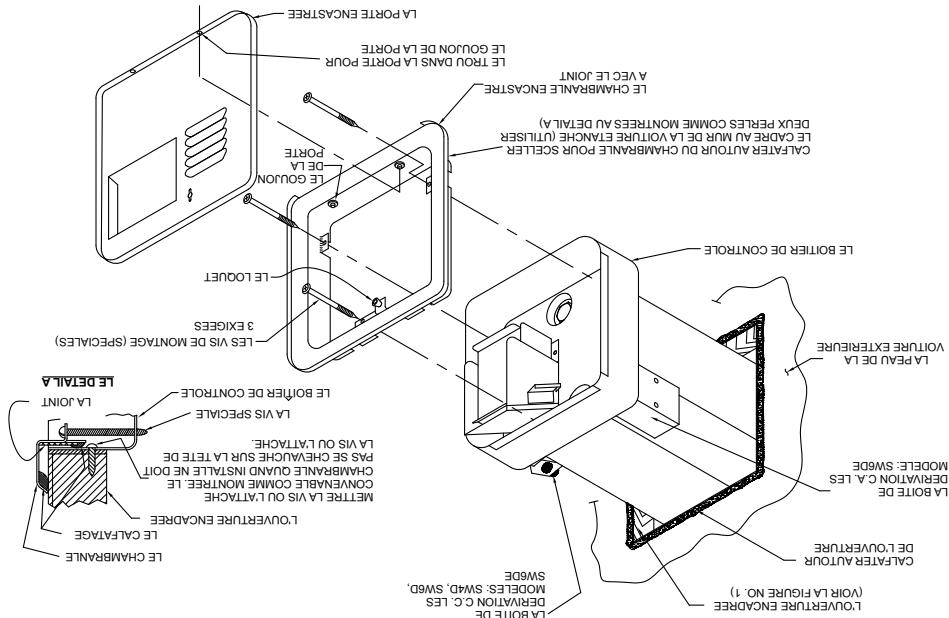


Figure 3



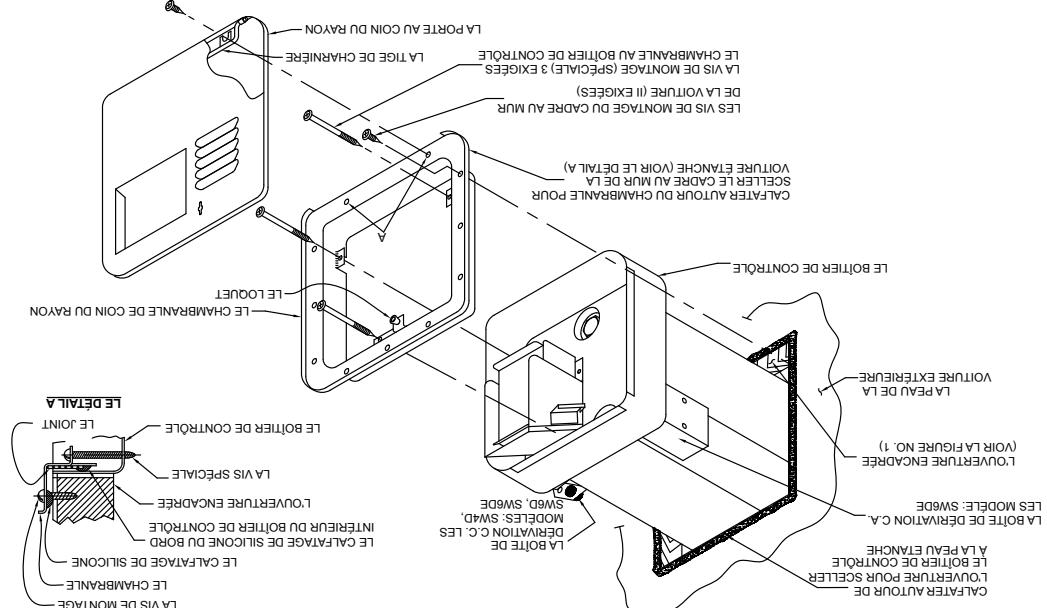

www.Airxcel.com
423-775-2131
Dayton, Tennessee 37321
676 Broadway Street
AIRXCEL, INC. - SUBURBAN DIVISION

AVEC VOTRE CHAUFFE-EAU.

TOUTES LES QUESTIONS TECHNIQUES ET LES QUESTIONS DE LA GARANTIE DOIVENT ÊTRE

LE PROPRIÉTAIRE: GARDEZ CES INSTRUCTIONS ET LA GARANTIE POUR LA RÉFÉRENCE FUTURE.

L'INSTALATEUR: COLLER CES INSTRUCTIONS À OU ADJACENT AU CHAUFFE-EAU.

UN DÉUR EST AJOUTÉ AU GAZ UTILISÉ PAR CET CHAUFFE-EAU.

NE PAS EMAGASINER OU UTILISER L'ESSENCE OU LES AUTRES MATIÈRES COMBUSTIBLES
POUR VOTRE SÉCURITÉ

CONSULTER UN INSTALATEUR QUALIFIÉ, UNE AGENCE DE SERVICE OU LE FOURNISSEUR DE GAZ.

AVERTISSEMENT: L'INSTALLATION, LA JUSTEMENT, LA MODIFICATION, LE SERVICE OU

VIDER ENTRETIEN DU CHAUFFE-EAU SI Y A DES TEMPERATURES DE CONGÉLATION.

AVERTISSEMENT DE LA CONGÉLATION

- NE PAS ESSAYER D'ALLUMER AUCUN APPAREIL
- NE PAS TOUCHER AUCUN INTERRUPTEUR ÉLECTRIQUE: NE PAS UTILISER AUCUN TÉLÉPHONE DANS VOTRE VÉHICULE.
- APPELER IMMÉDIATEMENT VOTRE FOURNISSEUR DE GAZ DU TÉLÉPHONE D'UN VOISIN. SUIVER LES INSTRUCTIONS DU FOURNISSEUR DE GAZ.
- SI VOUS NE POUVEZ PAS CONTACTER VOTRE FOURNISSEUR DE GAZ, APPELER IMMÉDIATEMENT VOTRE FOURNISSEUR DE GAZ DU TÉLÉPHONE D'UN VOISIN. SUIVER LES INSTRUCTIONS DU FOURNISSEUR DE GAZ.
- PELLER LE SERVICE DES INCENDIES.

CE QUI FAIRE SI VOUS SENTEZ LE GAZ

POUR VOTRE SÉCURITÉ

ET LE LOGEMENT MOBILE

POUR L'INSTALLATION DANS LES VÉHICULES DE RÉCREATION

SW6DEM Allumage Direct Par Étincelle, Élement Électrique et l'aide Moteur

SW6DM Allumage par étincelle électrique direct et l'aide Moteur

SW6DE Allumage par étincelle électrique direct et l'élément

SW4DE Allumage par étincelle électrique direct et l'élément

SW6D Directe à allumage par étincelles

SW4D Directe à allumage par étincelles

LES MODELES



LE CHAUFFE-EAU DE GAZ

LA VENTOUSE DIRECTE

LE MANUEL D'INSTALLATION ET D'UTILISATION